



Figure A4. One of the SEAOC Seismology Committee proposals for the 1988 Uniform Building Code zone map. Zones are identified by the numbers from 0 to 4. Seismic zone factors are assigned to each zone; Zone 0 = 0, Zone 1 = 0.1, Zone 2 = 0.20 (= 0.15 for Zone 2 east of the continental divide), Zone 3 = 0.3, and Zone 4 = 0.4. Each zone also has specific structural detailing requirements. After ICBO, 1986 (This map was redrawn from the original source, if differences occur, the original source should be used).