

3
HOUSTON AREA

 
1
AUSTIN AREA

2
SAN ANTONIO AREA

EXPLANATION

- △ 7-2277 LOW-FLOW, CREST-STAGE, FLOOD-HYDROGRAPH AND FLOOD-PROFILE PARTIAL-RECORD STATION
- 1 INSET AREA
- RIVER BASIN DIVIDE

The numbers adjacent to each station indicate an abbreviated station number. The normal station number identifier is an eight digit number. Because of the limited space, the number is abbreviated. The prefix 07 is used in the Red and Arkansas River basins; 08 is used in all other basins. For example, the number 475 in the Trinity River basin would be station number 08047500



MAP SHOWING LOCATION OF ACTIVE PARTIAL-RECORD, SURFACE-WATER STATIONS IN TEXAS, JANUARY 1984