 


- EXPLANATION**
- ▲ 2350 STREAMFLOW OR RESERVOIR-CONTENT STATION
 - ▼ 1095 CHEMICAL-QUALITY OR SEDIMENT STATION
 - RIVER BASIN DIVIDE
 - 2 INSET AREA

The numbers adjacent to each station indicate an abbreviated station number. The normal station number identifier is an eight digit number. Because of the limited space, the number is abbreviated. The prefix 07 is used in the Red and Arkansas River basins; 08 is used in all other basins. For example, the number 475 in the Trinity River basin would be station number 08047500.



MAP SHOWING LOCATION OF ACTIVE SURFACE-WATER STATIONS IN TEXAS, JANUARY 1988