



BASE FROM WALKER-ALASKA AERIAL SURVEY, INC., 1:12,000, 1988

SCALE 1:12,000  
0 1000 2000 3000 4000 5000 FEET  
0 200 400 600 800 1000 1200 METERS

CONTOUR INTERVAL 20 FEET (BELOW 500 FEET)  
CONTOUR INTERVAL 100 FEET (ABOVE 500 FEET)

EXPLANATION

- Drainage-basin boundary
- Direction of surface-water flow
- A29 Well or borehole sampling site and number
- ▲ A13 Surface-water sampling site and number
- △ A56 Surface-water measurement site and number
- ◆ 62 Weather station

PLATE 1. -- MAP SHOWING DRAINAGE AREAS AND SURFACE WATER FLOW DIRECTIONS.

U.S. COAST GUARD SUPPORT CENTER  
KODIAK, ALASKA