

- EXPLANATION**
- Drainage-basin boundary
 - Direction of surface-water flow
 - A67 Well or borehole sampling site and number
 - ▲ A43 Surface-water sampling site and number
 - ◆ Weather station

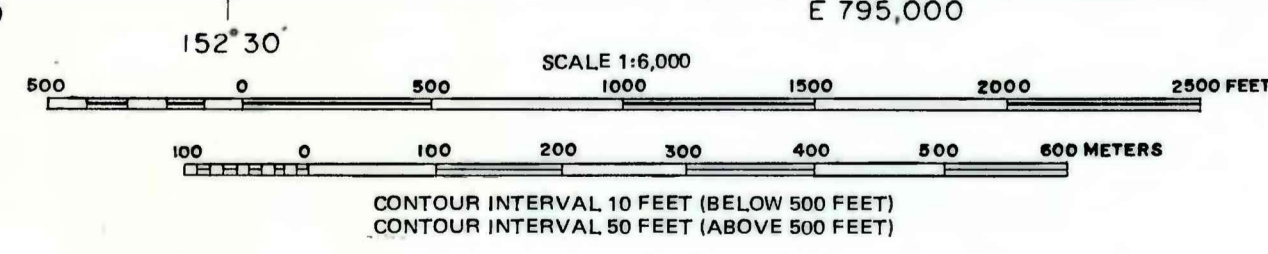


PLATE 2. - MAP SHOWING DRAINAGE AREAS AND SURFACE-WATER FLOW DIRECTIONS,
NYMAN PENINSULA AND KODIAK AIRPORT AREA.

U.S. COAST GUARD SUPPORT CENTER
KODIAK, ALASKA
South Half