


EXPLANATION

- BOUNDARY CONDITION IS SPECIFIED HEAD
- BOUNDARY CONDITION IS NO FLOW
- DOWNDIP EXTENT OF UNCONFINED AREA
- 1 RIVER NODE
- 2 WELL OR PUMPING NODE
- 3 BOTH RIVER AND WELL NODE

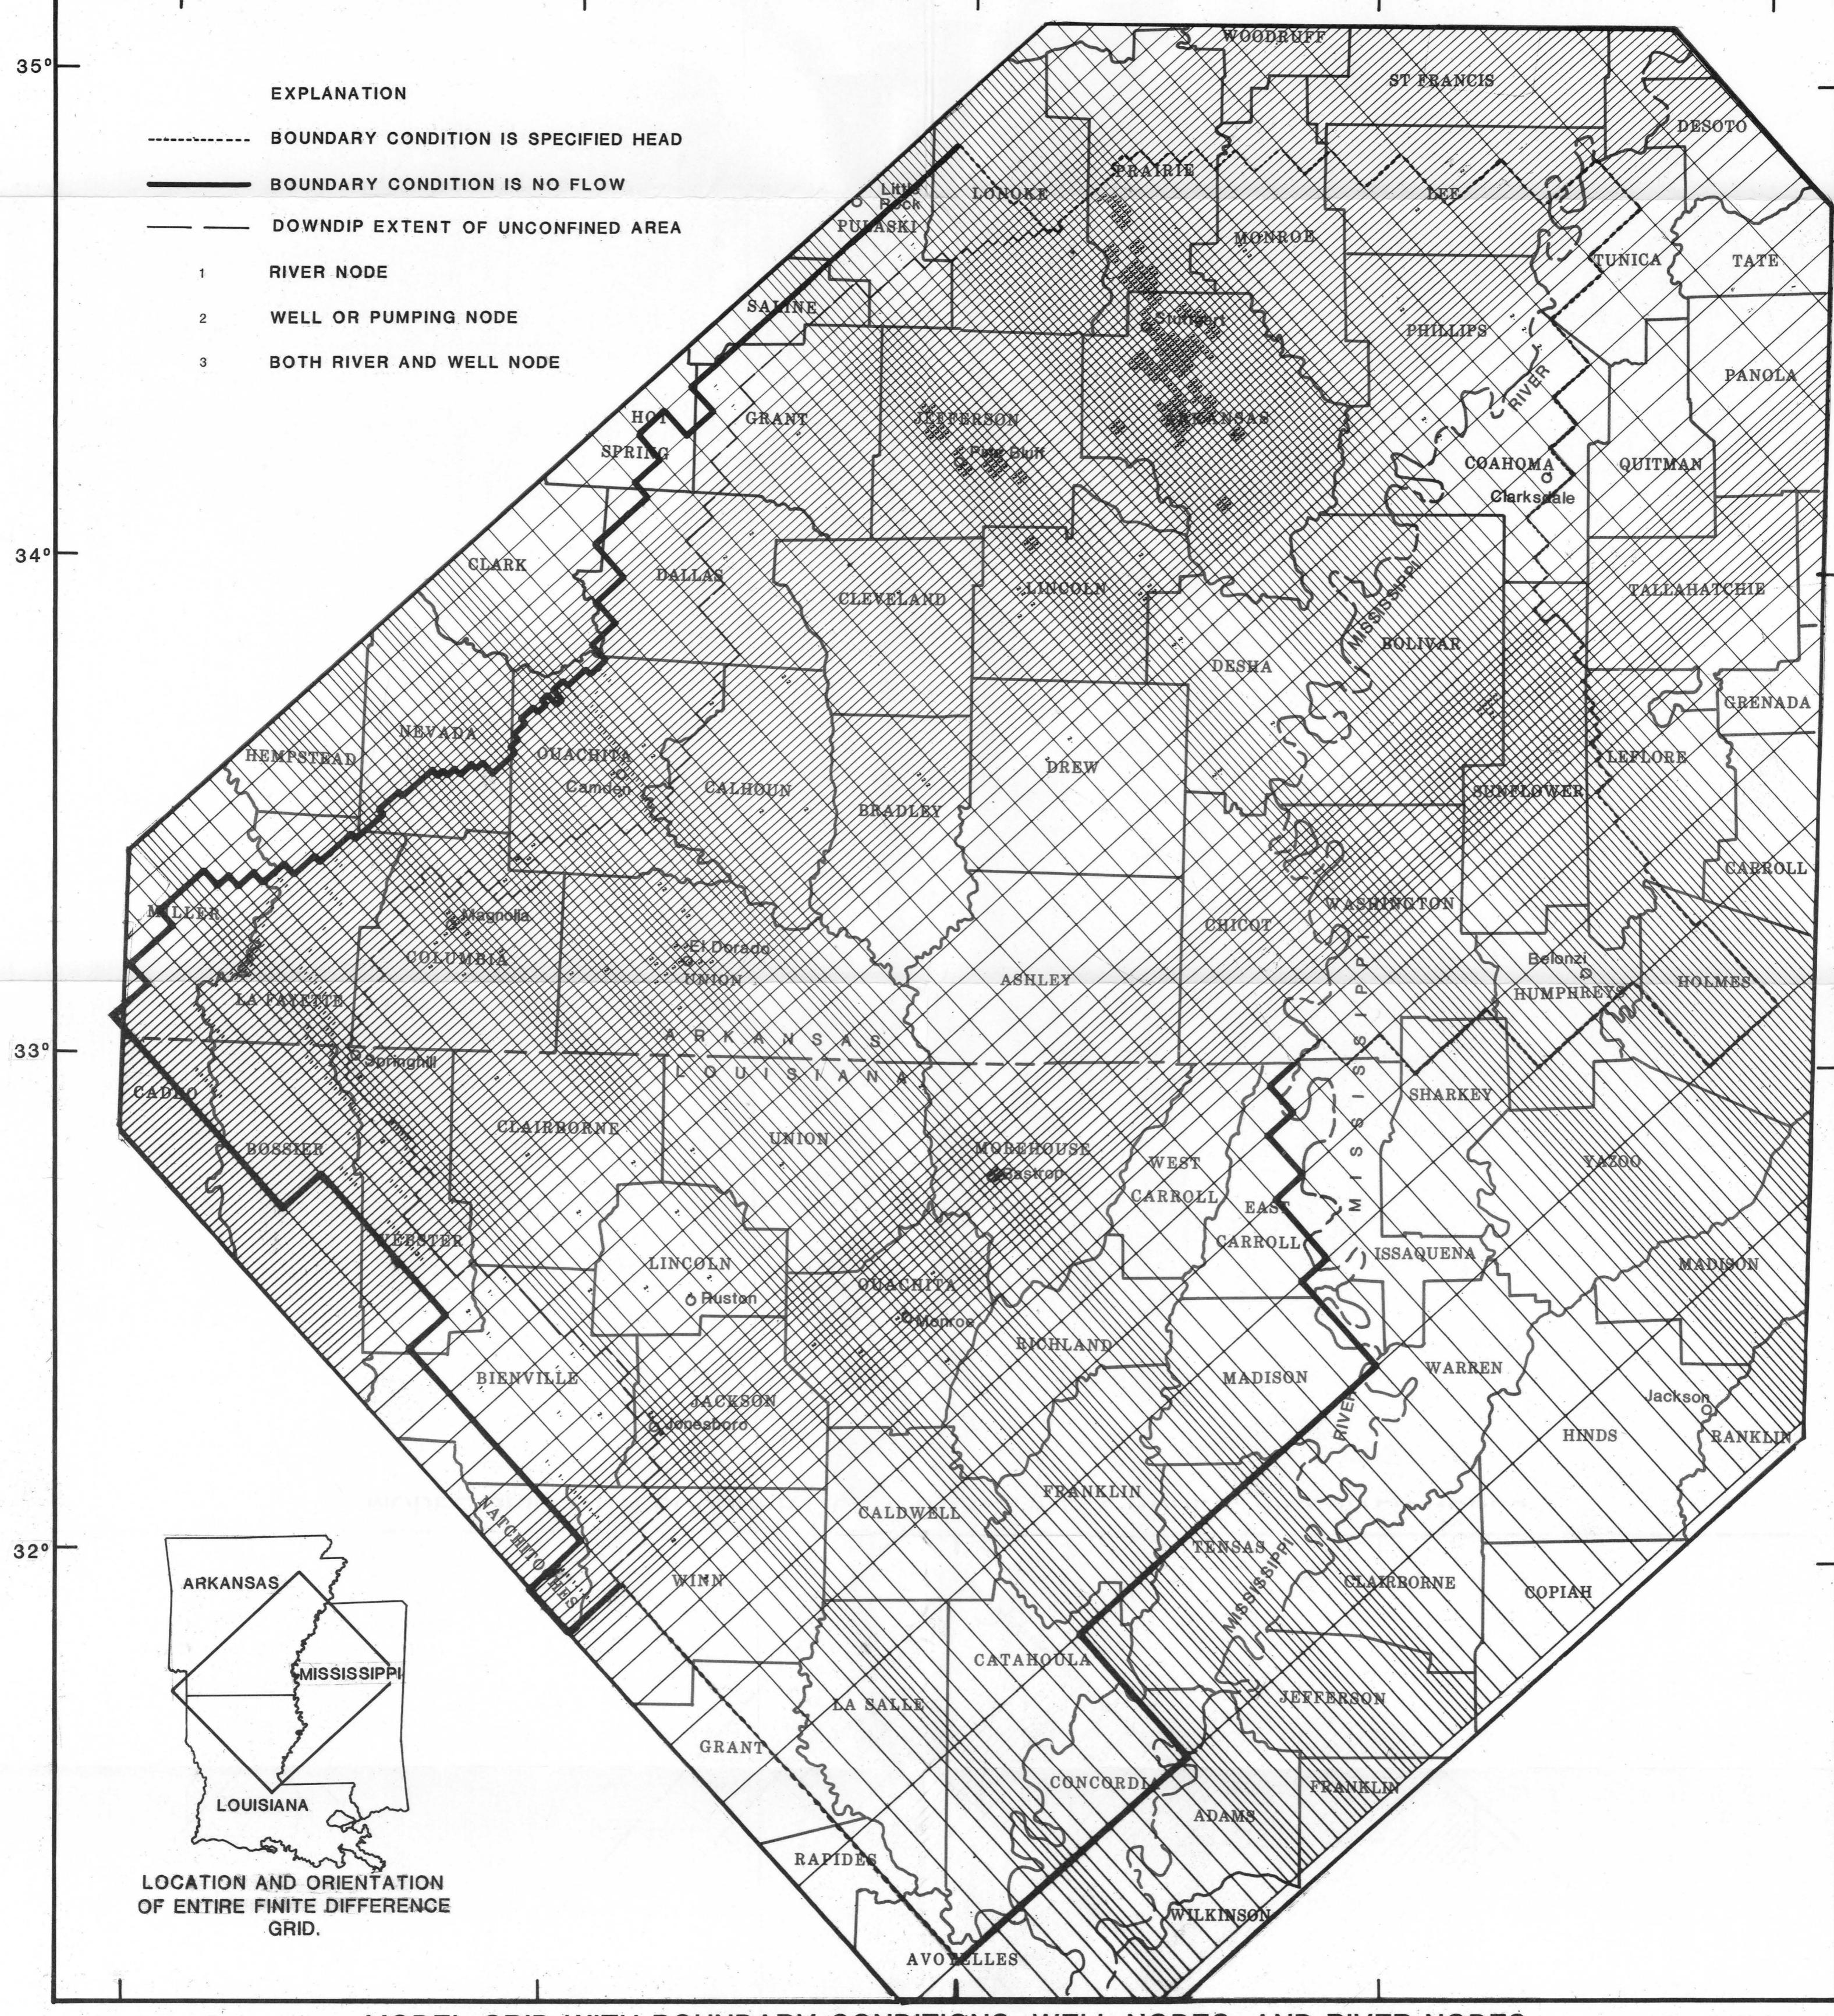

MODEL GRID WITH BOUNDARY CONDITIONS, WELL NODES, AND RIVER NODES