

EXPLANATION

TRANSMISSIVITY, IN SQUARE FEET PER DAY







-  0-10,000
-  10,001-20,000
-  20,001-30,000
-  30,001-40,000
-  40,001-50,000
-  > 50,000

Figure 10.--Areal distribution of transmissivity in the calibrated model for each permeable zone.