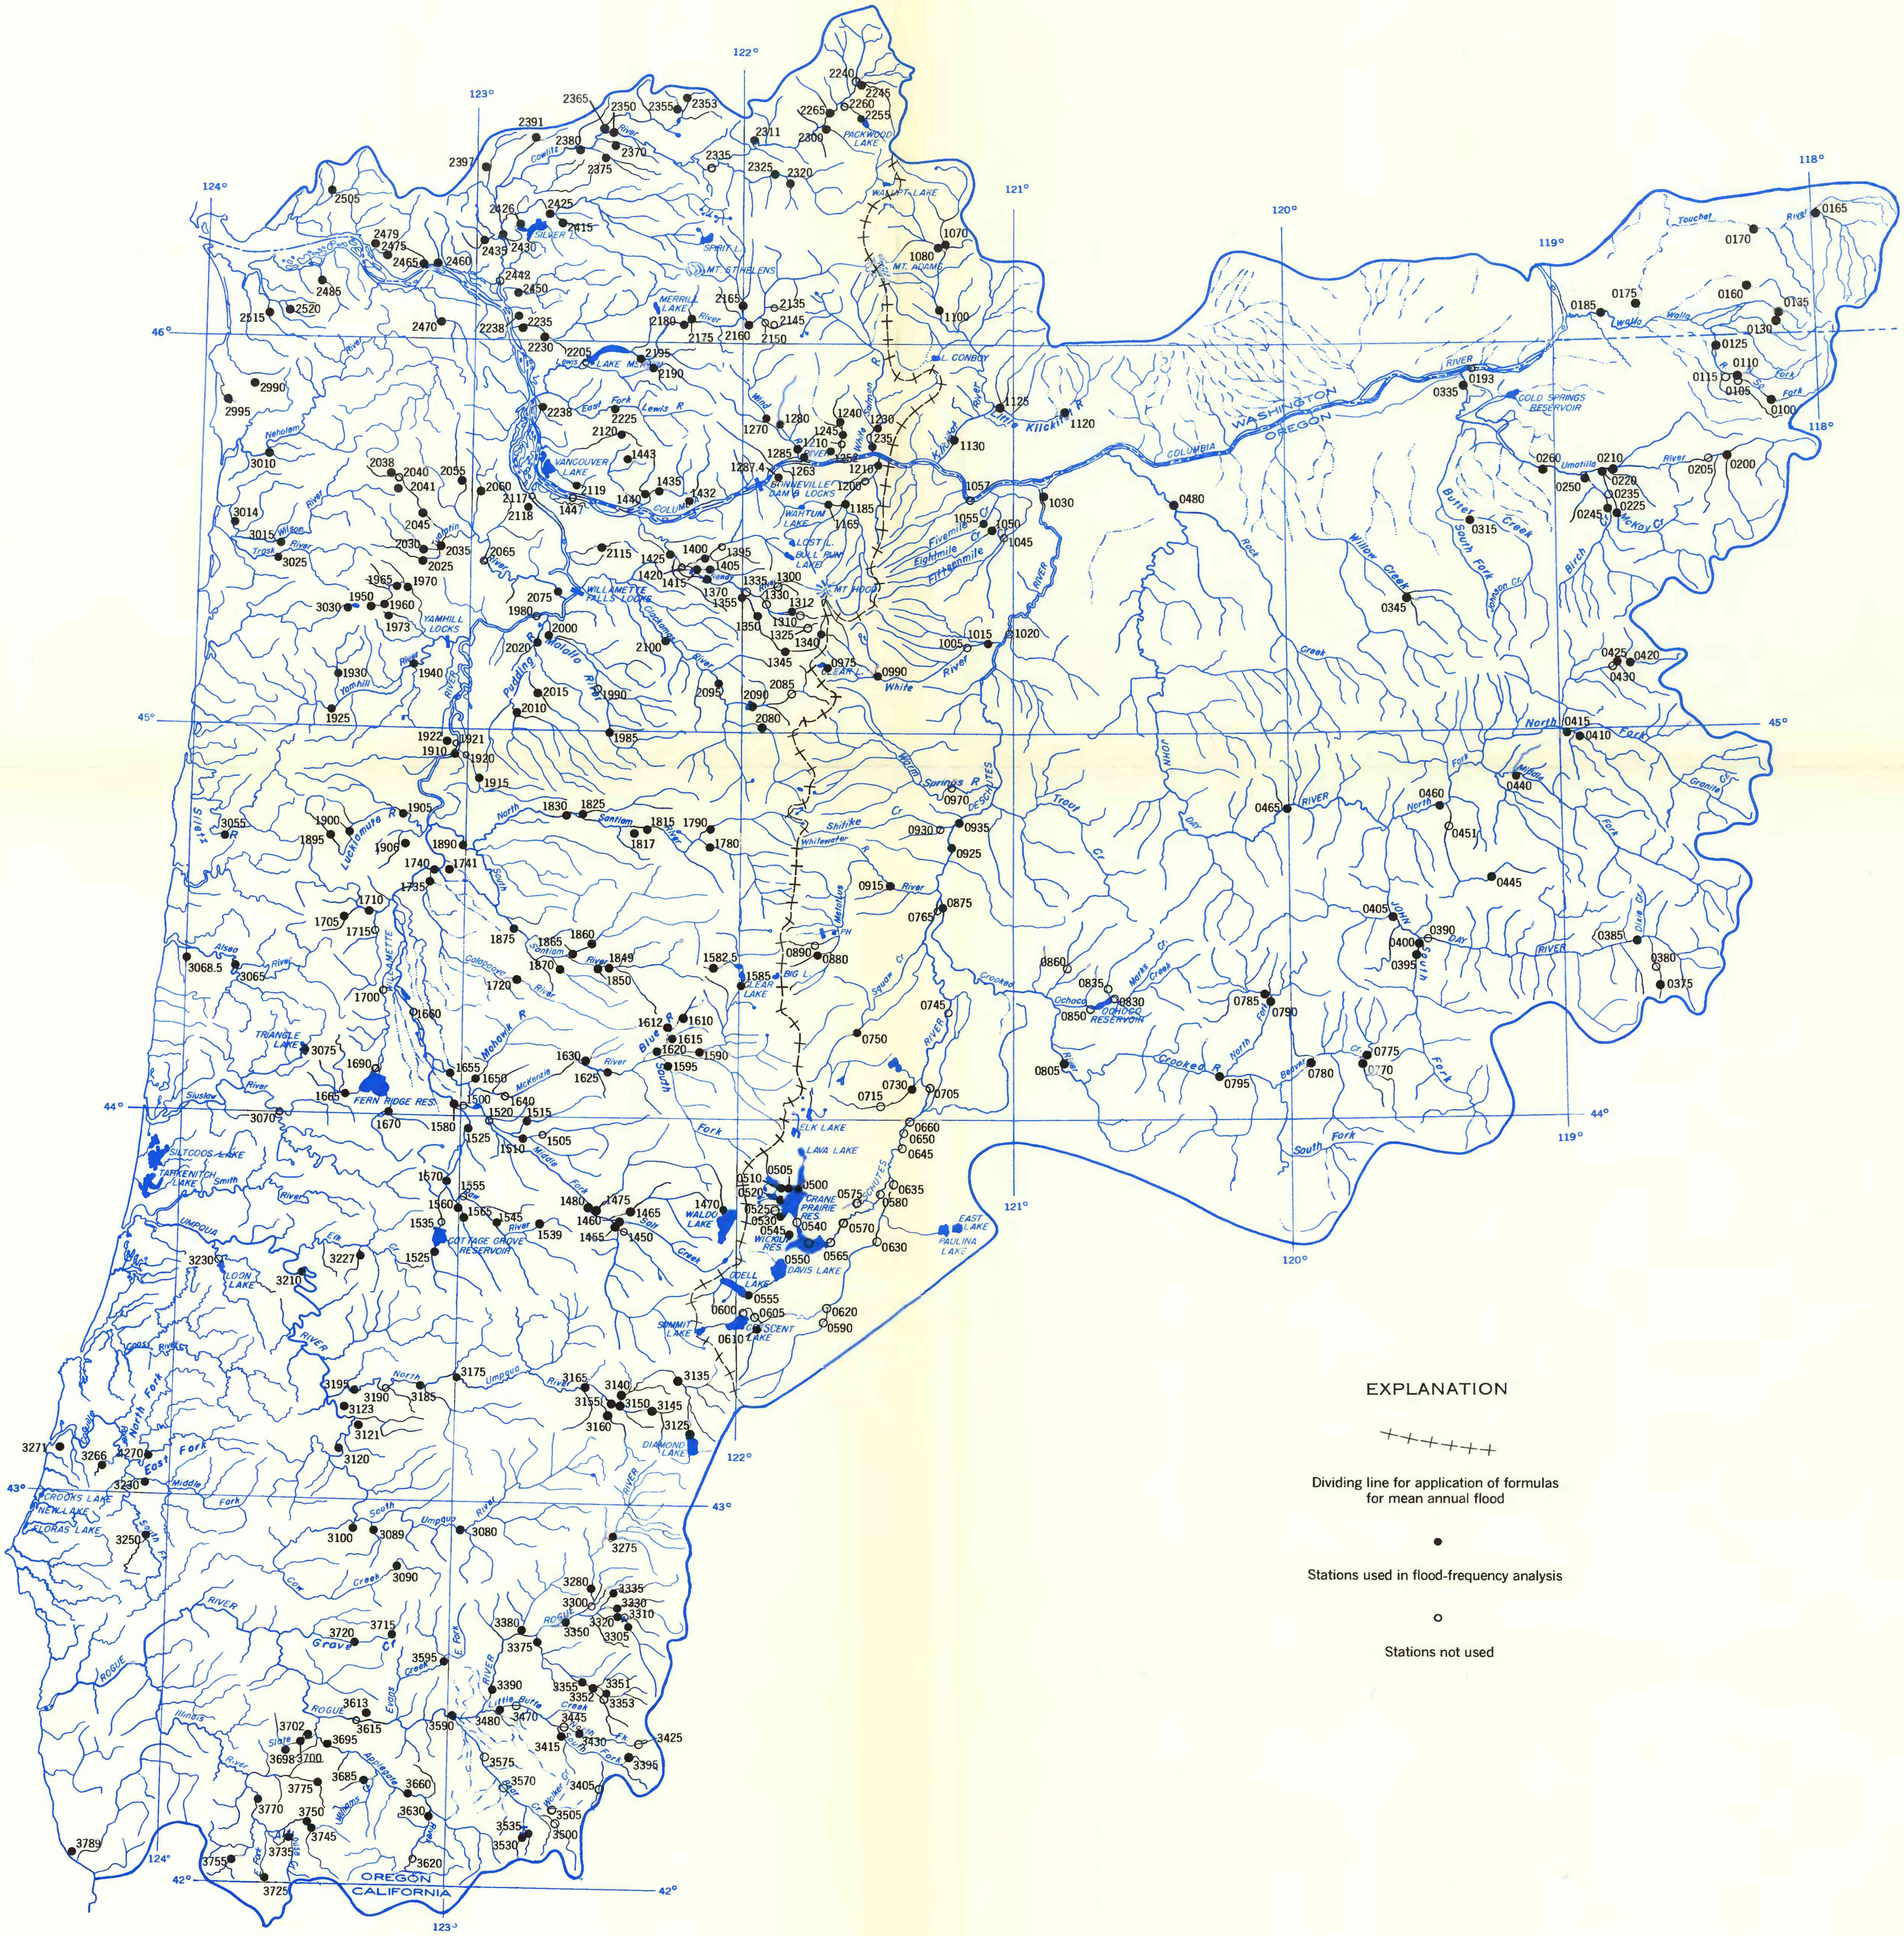

EXPLANATION

Dividing line for application of formulas for mean annual flood

● Stations used in flood-frequency analysis

○ Stations not used

INTERIOR—GEOLOGICAL SURVEY, WASHINGTON, D. C.—62252

Base map by U.S. Weather Bureau

MAP OF PACIFIC SLOPE BASINS IN OREGON AND LOWER COLUMBIA RIVER BASIN, SHOWING LOCATION OF GAGING STATIONS WITH 5 OR MORE YEARS OF ANNUAL FLOOD RECORD

20 0 100 MILES